

# C-10707US - Fosmon User Manual

Height: 260mm

Width: 190mm

Front & Back



## Mechanical 1-Outlet Outdoor Timer

User Manual

Thank you for purchasing this Fosmon product. This guide will help you to familiarize yourself with all the features and functions of the product.



### DO NOT RETURN THE PRODUCT

There are good days and there are bad days. If there is a problem with your product, or you are unhappy with it, we apologize for our mistake.

PLEASE GIVE US A CHANCE and WE WILL MAKE IT RIGHT




Contact us:  
Toll Free: 1-833-3-FOSMON (833-336-7666)  
Direct: (612) 435-7508  
Email: support@fosmon.com

## Features and Specifications

- 110-125V AC outlet
- 15A MAX
- 125VAC 60Hz, 15A, Resistive
- 125VAC 60Hz, 15A, General purpose
- 125VAC 60Hz, 10A/1250W, Tungsten
- 125VAC 60Hz, TV-5, 3/4HP
- ETL Listed
- 3-prong female outlet x 1
- 24-hour, 30-minute interval programming
- Weather resistant lid
- Wall mountable
- Built-in 7-inch 3-prong cord

## Package Includes

- 1x Timer
- 1x User Manual

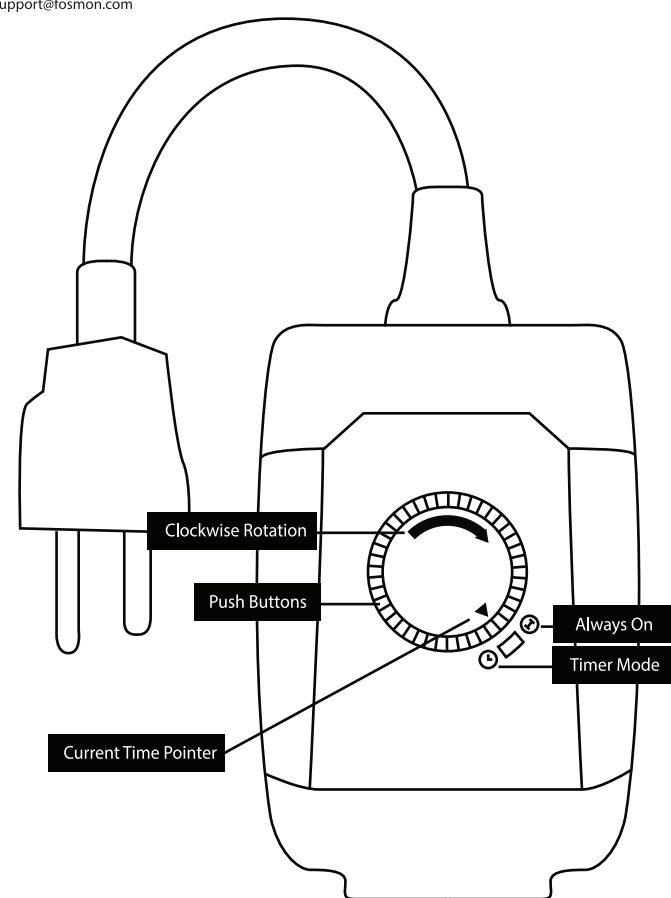

## Instructions

### 1. To Program

- There are 48 push buttons around the dial. Each is for a period of 30 minutes.
- When a push button is pressed down, the appliance connected to the timer will be on during that period of time.
- When a push button is lifted up, the appliance plugged into the timer will be off during that period of time.



#### NOTE:

1. If the push buttons are flush with the dial, they are in the up position. Otherwise, they are in the down position.
2. When the Current Time Pointer is pointing to a push button, the push button may not be pressed down. Turn the dial clockwise, and move the push button away from the pointer. Then you will be able to press the push button down.

### 2. Set Time of Day

- Turn dial clockwise one full revolution then advance until arrow points to the current time.
- The dark area denotes night time and the white area denotes daytime.

### 3. To Activate/Deactivate The Timer

- After completing steps 1 and 2, slide the switch to the  position to activate the timer.
- Plug the timer to a wall outlet and then plug appliance to the timer.
- Turn on appliance to complete setup.
- To deactivate the timer, slide the switch to the  position. The appliance connected to the timer will remain ON.

## Follow Us On Social Media



www.fosmon.com

support@fosmon.com

© 2022 Fosmon Inc. All rights reserved.

All trade names are registered trademarks of respective manufactures listed.

## Limited Lifetime Warranty

This product includes a limited lifetime warranty. Please visit our Fosmon website for more details.

## Recycling the Product

To dispose of this product properly, please follow the recycling process regulated in your area.