

C-10786US User Manual

Size 85 mm (H) x 80 mm (L)

Folded



125V/15A/60HZ WEEKLY PROGRAMMABLE TIMER FOR SINGLE POLARIZED OUTLET with 10 On/Off Program Setting - White - 2 Pack



PLEASE DO NOT RETURN THIS PRODUCT
There are good days and bad days. If there is a problem with your product or you are unhappy with it,
PLEASE GIVE US A CHANCE TO MAKE IT RIGHT.

Email: support@fosmon.com
US Toll Free: 1-833-3-FOSMON
(833-336-7666)
Local / International: 1-612-435-7508

Thank you for purchasing this Fosmon product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

Fosmon's Indoor Digital Timer will allow you to schedule ten on/off programs and the programs will repeat every day. The timer will save your money and energy by always turning on/off your lamps, electrical appliances, or decoration lighting on time.


Package Includes

2x Weekly Programmable Timer
1x User Manual

Specifications

Power	125VAC 60Hz
Max. Load	15A General Purpose or Resistive
	10A Tungsten
	1/2HP, TV-5
Battery Backup	NiMH 1.2V > 100 Hours

Product Diagram

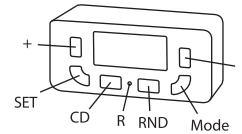

Tips for Setting: Press + and - buttons simultaneously to exit setting mode anytime. If no button is pressed in 30 seconds, the timer will exit setting mode automatically.

Initial Setup

- Charging the battery:** Plug the timer into a regular 125 Volt wall outlet for approximately 1 hour to charge the memory backup battery.
- Timer reset:** Use a toothpick or sharp pencil to press the *R* button.
- 12/24 hour mode:** The timer by default is 24-hour mode. Press *SET* and *CD* buttons simultaneously to toggle between 12 and 24 hour formats.
- Set the date and time:** Press and hold *SET* button for 2 seconds until the day is flashing. Use + and - buttons to select current day, and then press *SET* button to advance to hour setting. Repeat the same procedure to set hour and minute.
- Daylight Saving Time:** Press *SET* and *MODE* buttons simultaneously to change the clock for DST.

Program ON/OFF Schedules

- While in clock display, press + button once to show first event.
- Press *SET* button once, and the day will flash.
- Use the + and - to select any day or days, and then press *SET* button to advance to hour setting.
- Use the + and - to select hour, and then press *SET* button to advance to minute setting.
- Use the + and - to select minute, and then press *SET* button to complete minute setting.
- Press + button to advance to the next event.
- Repeat the step 2 to step 6 to set additional events if desired.

NOTE:

- To clear the setting in an event, press *MODE* button, and the screen will show "--:--".
- Make sure programs don't overlap, and unused programs show "--:--".

Timer Modes

While in clock display, press *MODE* button to select one of the modes:
"ON" – the plugged-in device remains ON.

"OFF" – the plugged-in device remains OFF.

"AUTO" – the plugged-in device follows the programmed schedules.

NOTE: If the mode is switched from ON to AUTO, the plugged-in device will remain on until the next programmed off time. If the mode is switched from OFF to AUTO, the plugged-in device will remain off until the next programmed on time.

Countdown Function

- While in clock display, press - button once to display countdown timer.
- Press *SET* button once, and OFF will flash.
- Use + or - button to select ON or OFF. (If ON is selected, the timer stays on during the countdown period, and vice versa.) Press *SET* button to advance to hour setting.
- Use + or - button to select hour, and then press *SET* button to advance to minute setting.
- Use + or - button to select minute, and then press *SET* button to advance to second setting.
- Use + or - button to select second, and then press *SET* button to complete setting.
- While the timer is in AUTO mode, press *CD* button once to activate the countdown timer. Press *CD* button again to cancel the countdown.

Random Function

- While the timer is in AUTO mode, press *RND* button to activate random function.
- "R" will show on the screen, and the timer will randomly turn on for 10 to 31 minutes during the time gap from 6PM to 6AM. The ON/OFF events during the time gap from 6AM to 6PM will still function.
- Press *RND* button again to exit random mode.

WARNINGS

Risk of Electric Shock

- Keep children away.
- Do not use in wet locations.
- Do not plug two or more timers together.
- Always ensure the plug of any appliance is fully inserted into the timer outlet.
- If cleaning of the timer is required, remove from mains power and wipe timer with a dry cloth.
- Do not immerse timer in water or any other liquid.
- For indoor use only.

Risk of Fire

- Don't plug in an appliance where the load exceeds rated capacity.
- Do not use with extension cords.
- Do not use to control appliances that contain heating elements (cooking appliances, heaters, irons, etc.).

FCC REGULATORY STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Lifetime Warranty

Visit fosmon.com/warranty for Product Registration, warranty and limited liability details.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

Follow Us On Social Media



www.fosmon.com
support@fosmon.com
© 2022 Fosmon Inc. All rights reserved.